



Colour management for output linearization of a 9 step grey scale

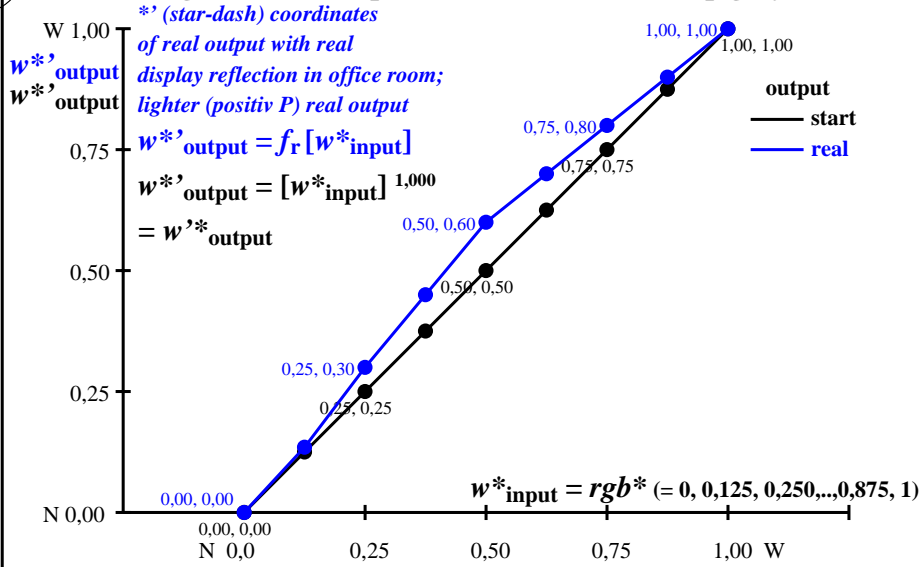


Colour management for output linearization of a 9 step grey scale

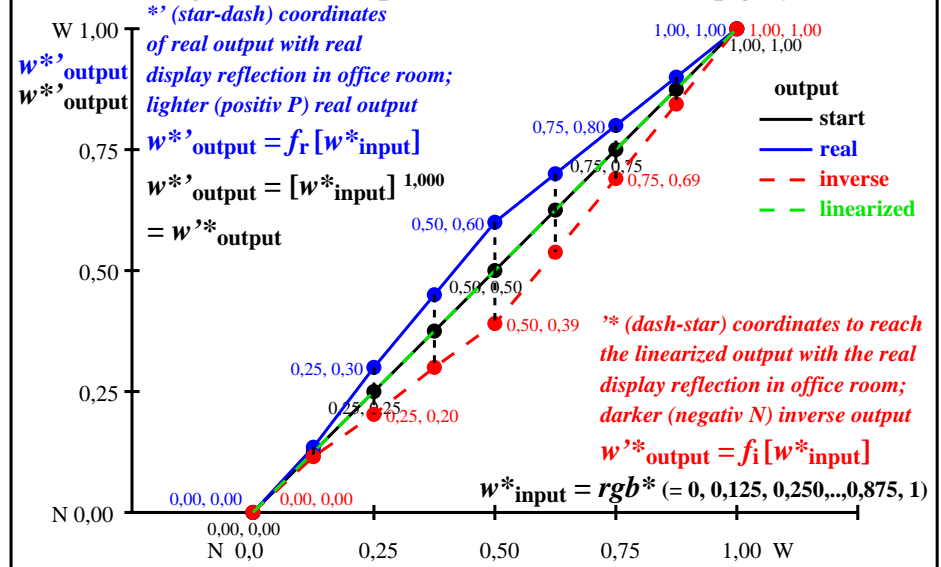

hem80-3n

hem81-3n

Three, 5 and 9 colour steps for visual evaluation s: 0, 125, 250, 375, 500, 625, 750, 875, 1000
 Gelb Y00w – Gelb Y16w = White W $L^*_{TUBLOG,U}=[50/\log(5)] \log(Y/Y_U)+50, Y_N=4, Y_U=20, Y_W=100$



Three, 5 and 9 colour steps, numeric specification

0,00 0,00	e08=0, .. a1=e08	1,00 1,00	0,00 0,00	e04=0, .. b1=e04*a1	1,00 0,00 b2=a1	e48=0, .. b3=e48* (1-b2)+b2	1,00 1,00	0,00 0,00	e02=0, .. c1=e02*b1	1,00 0,00 c2=b1	c24=0, .. c3=e24* (b2-b1)+b1	0,00 1,00 c4=b2	e46=0, .. c5=e46* (b3-b2)+b2	1,00 0,00 c6=b3	e68=0, .. c7=e68* (1-b3)+b3	1,00 1,00
--------------	---------------------	--------------	--------------	------------------------	-----------------------	-----------------------------------	--------------	--------------	------------------------	-----------------------	------------------------------------	-----------------------	------------------------------------	-----------------------	-----------------------------------	--------------

Three, 5 and 9 colour steps, numeric calculation example

0,00 0,000 0,000	0,60 0,600 0,390	1,00 1,000 1,000	0,00 0,000 0,000	0,50 0,300 0,202	1,00 0,600 0,390	0,50 0,800 0,690	1,00 1,000 1,000	0,00 0,000 0,000	0,45 0,135 0,115	1,00 0,300 0,202	0,50 0,450 0,299	0,00 1,000 0,390	0,50 0,700 0,538	1,00 0,800 0,690	0,49 0,900 0,844	1,00 1,000 1,000
------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------	------------------------

Three, 5 and 9 colour steps, produced visual linearization r: 0, 135, 300, 450, 600, 700, 800, 900, 1000
 i: 0, 115, 202, 299, 390, 538, 690, 844, 1000 $L^*_{TUBLOG,U}=[50/\log(5)] \log(Y/Y_U)+50, Y_N=4, Y_U=20, Y_W=100$



hem80-7n, Test samples: 3, 5 and 9 colour steps, greu=0,500, expu=1,000, expa=1,000, expi=1,000

TUB-test chart hem8; adjacent grey samples for visual intervall scaling, evaluation of the series Y_W with 3, 5 and 9 steps, output (rgb*)^{1,0} & experimental; surround mean Grey U=N08w

see similar files of the whole serie: <http://farbe.li.tu-berlin.de/hem8/hem810np.pdf> or <http://farbe.li.tu-berlin.de/hem8/hem8.htm> or <http://color.li.tu-berlin.de>

TUB registration: 20241001-hem8/hem810np.pdf / .ps
 application for evaluation and measurement of display or print output

TUB material: code=rh4ta